

INSTALLATION & SAFETY INSTRUCTIONS



These instructions are for guidance only Read these instructions fully before using the fitting. Retain these instructions for future reference.

LIGHT MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN

General safety instructions

- Ensure mains power is disconnected & switched off when installing the fitting.
- Never look directly into the LED light source. The light emitted can contain the colour blue.
- To clean: Ensure that the fitting is disconnected from the mains and cannot be unintentionally reconnected.
- Place only upon level and stable surfaces.
- Do not use in areas in which there is a danger of explosion.
- Do not use near flammable materials.
- Do not place in water or other liquids.
- Never operate with wet hands.
- Never cover the equipment.
- Never operate when the casing is open, or when the wiring casing is missing or damaged, or when the protective screen is defective.
- Never spray this unit, and never attempt to clean it with a steam pressure cleaner as this can damage the insulation and seals.
- Never attempt to repair this unit yourself. Repairs should only be carried out by a qualified
- If the supply cable is damaged, stop using the unit immediately & consult a qualified electrician.
- If diffuser is broken, stop using the unit immediately & consult a qualified electrician.

Manufacturer


HUB UK Group Ltd Keepers West Park Road Newchapel Surrey RH7 6HT

Email: help@lighthubdirect.com Tel: +44 (0)330 133 1311

Please contact us if you any questions or queries regarding the product



	BHEM18
Wattage	18W
Lumens	1600 lm
LED Life	35,000 hrs
LED Colour Temp	3000K/4000K/6500K SELECTABLE
Voltage	200-240V AC 50/60Hz
Operating Temp	-20° C to +40° C
CRI	>80
IP Rating	IP65
Dimmable	No
Battery Run Time	>3hrs
H x W x D	300 x 300 x 92mm
Guarantee	3 Years
Class	II

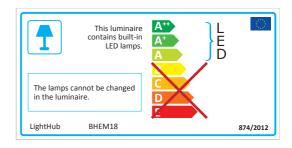



Recommendations

- Installation should be carried out in accordance with the latest IEE (BS7671) Regulations & the latest Buildings Regulations. Please consult a qualified electrician.
- Please ensure the mains supply is switched OFF before installing and working on this fitting.
- This unit is Class II rated and earth is not required.
- To maintain the IP rating of the unit, a suitable gland should be used for the cable entry and/or fire retardant silicon sealant should be used to effectively seal the hole.
- Not suitable for use with dimmers.
- The fitting is suitable for use in ambient temperatures of -20 to +40 degrees C. If the fitting is installed in locations where the temperature may vary beyond these temperatures or reach these limits for prolonged periods, the battery life may be shortened and should be tested more regularly.
- High voltage insulation test equipment must not be used on this fitting and may cause irreparable damage.
- This unit has no replaceable parts.

Cleaning

Before cleaning the fitting, disconnect the power cable and allow the fitting to cool down sufficiently. Clean with a dry or slightly moist, clean, lint-free cloth and a mild detergent if required. Do not use cleaners that contain abrasives or solvents.

Maintenance

- Check power cable and housing of the fitting for damage before use. If the diffuser is damaged, unit must be replaced immediately.
- Clean any dirt from the housing or the diffuser immediately, it could potentially cause overheating.

Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle if responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



- 2. Remove the diffuser from the base by removing the four screws around the top of it.
- Select a suitable cable entry point either on the base or the 20mm knockout points on the side of the fitting.
- Position and fix the base to suitable solid surface using the fixings provided. 4.
- 5. Feed the supply cable into the luminaire through the cable entry hole, using the provided grommet to retain the IP rating of the fitting. If you have cut your own hole, a suitable grommet or gland should be fitted, or conduit can be run to the fitting.
- Terminate the cable into the push-fit terminal block, Make sure the cables are pushed in far 6. enought to make good connection and can not be pulled back out. Ensure the correct polarity is observed:
- Non-Maintained Operation: The fitting is supplied with a permanent live feed, but not switched. 7. A green LED will illuminate to show power is present and the battery is charging. During a power failure, the fitting will automatically switch to battery power and illuminate for at least 3 hours to enable safe evacuation of the property.


Permanent Live - (L) Brown

Neutral - (N) Blue

8. Maintained Operation: The fitting is used as a normal light and is switched or permanently on. To use as a normal switched light, connect a Permanent Live feed and the switch to Switched Live terminal. For an unswitched circuit, connect the Permanent Live and insert the supplied loop between PL and Switched Live. In the event of a power failure, the fitting fails over to the battery pack.

Permanent Live - (PL) Brown & Insert a Loop to Switched Live (SL).

Neutral - (N) Blue

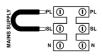

- Switch on the power supply and check the battery charging LED indicator is illuminated.
- 10. Set the required colour temperature of the LEDs using the switch located on the LED Driver inside the fittina.

SYMBOL	COLOUR
DL	DAYLIGHT - 6500K
CW	COOL WHITE - 4000K
WW	WARM WHITE - 3000K

- 11. Re-fit the diffuser by placing over the base and replacing the screws.
- 12. When first installed, allow for 24 hours minimum to obtain full battery charge.
- 13. After the charging period, disconnect the mains supply to ensure that the fitting illuminates in emergency mode for at least 3 hours.

WARNING:

This luminaire MUST be disconnected before it is installed, subjected to any high voltage or subjected to insulation resistance testing. Otherwise irreparable damage will occur to luminaire components.